URGENT

☐ ROUTINE

☐ MANDATORY ☐ INFORMATIONAL

Service Bulletin

NUMBER 2907 40001

ATTENTION: SERVICE MANAGER

This bulletin provides information showing proper positioning of the steering cross-link rod end clamps for both RH and LH rods.

Following any maintenance affecting these components, see Figure 1 and position the rod end clamps as shown, with bolts located on the lower side of the rod end clamp; tighten nut to secure clamps in this position.

WARNING

ENSURE THAT CLAMP BOLT IS ALWAYS SECURED (NUT TIGHTENED) IN THIS POSITION TO PREVENT INTERFERENCE WITH IDLER ARM OR BELLCRANK.

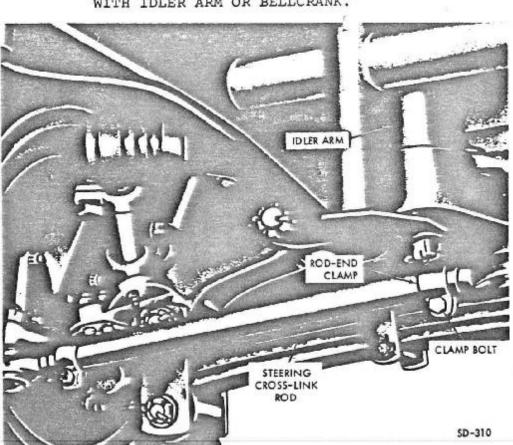


FIGURE 1

F.M. Gos AG OF NEST SET SET SURFACE STREET SERVICE Manager AS OUTLINED IN THIS BULLETIN

GROUP

SUBJECT

Positioning Steering Cross-Link Rod End Clamp Bolts

MODEL (S) AFFECTED

2900R

(Factory Use Only) Information added to:

OWNER MANUAL (S)

SERVICE MANUAL (S)

PARTS MANUAL (S)

WARRANTY MANUAL (S)

OTHER